

---

## It's a Fact...

The AT-10S is part of Roland's Atelier® S-Series home organs. Building on the popular R-Series, the AT-10S includes:

- 80 CD-quality GM2/© sounds
- 64-note polyphony
- 49-key upper-keyboard, 49-key lower-keyboard, 13 pedals
- 35 preset music styles
- 7-track recorder with built-in metronome
- Rotary Sound, Reverb
- Built-in 3.5" floppy disk drive
- LCD screen with SMF lyric display

---

## Restoring Factory Settings

Use the following procedure to restore factory default settings:

1. Make sure there is no floppy disk in the drive.
2. Turn off the power.
3. While holding down the ONE TOUCH PROGRAM button, turn on the power.
4. Release the ONE TOUCH PROGRAM button when the screen reads: "Factory Preset is Loaded."

Refer to the Owner's Manual, pg. 16 for more information.

---

## Selecting Tones

Use the following procedure to select tones on the upper and lower keyboards:

1. Press a tone button (e.g. Full, Jazz, Pipe, or Theater) under ORGAN in the UPPER section (located to the right of the screen.)
2. Press a tone button (e.g. Strings, Piano, Brass, etc.) under ORCHESTRAL in the UPPER section to hear two tones simultaneously.

**Note:** To hear only the ORCHESTRAL tone, press the selected tone button (indicator lit) under ORGAN in the UPPER section until its indicator is not lit

3. Press a tone button (e.g. Lower, Strings, Piano, etc.) in the LOWER section (located to the left of the screen) to select a tone on the lower keyboard.

Refer to the Owner's Manual, pp. 19–22 for more information.

---

## Selecting Music Styles

Use the following procedure to select a Music Style from internal memory:

1. Press a rhythm button (e.g. Big Band/Swing, Country/Oldies, Latin, etc.) in the RHYTHM section (located on the left side of the organ.)
2. Use the VALUE [+] and [-] to select a rhythm.
3. Press the RHYTHM button again.
4. Press the START/STOP button (located on the left side of the organ) to play the MUSIC STYLE; press the START/STOP button again to silence the organ.

Refer to the Owner's Manual, pp. 24–25 for more information.

---

## Selecting One Touch Programs

Use the following procedure to select automatic accompaniment settings:

1. Select a Music Style as described under "Selecting Music Styles."
2. Press the ONE TOUCH PROGRAM button (located on the left side of the organ.)
3. Play a chord on the lower keyboard.
4. Press START/STOP to silence the organ.
5. Press the ONE TOUCH PROGRAM button to return to the previous panel settings.

Refer to the Owner's Manual, pg. 27 for more information.

---

## Playing a Song from Disk

Use the following procedure to play a song from disk:

1. Insert a compatible music disk (i.e. SMF or Atelier format) into the drive.
2. Use the SELECT [+] and [-] to select a song.
3. Press the PLAY button to play the song.
4. Press the STOP button to silence the organ.

Refer to the Owner's Manual, pp. 34–35 for more information.

---

## Recording a Song

Use the following procedure to Record a Song using automatic accompaniment:

1. Select a Music Style as described under “Selecting Music Styles.”
2. Select an automatic accompaniment as described under “Selecting One Touch Programs.”
3. Make sure there is no disk in the drive.
4. Press the REC button in the COMPOSER section (located to the left of the disk drive.)

**Note:** The REC button indicator will light and the PLAY/STOP button will blink.

5. Play a note on the lower keyboard to start the automatic accompaniment and play a melody on the upper keyboard.
6. Press the STOP button when you are done.
7. Press the RESET button.
8. Press the PLAY button to play the song.

Refer to the Owner’s Manual, pg. 36–38 for more information.

---

## Saving a Recorded Song to Disk

Use the following procedure to save a recorded song to disk:

1. Record a song as described under “Recording a Song.”
2. Insert a formatted disk in the drive.

**Note:** Make sure the disk was formatted on an AT-10S (Refer to the Owner’s Manual, pp. 40–41 for more information.)

3. Press the SAVE button (located to the left of the disk drive.)
4. Use the VALUE [+] and [-] buttons to select a format.

**Note:** Songs saved in ORIGINAL format will only play on Atelier Organs; Songs saved in SMF (Standard MIDI File) format will play on any SMF compatible instrument, regardless of manufacturer.

5. Press the SAVE button.

Refer to the Owner’s Manual, pp. 43–44 for more information.

---

## Selecting Harmony Intelligence

Use the following procedure to select Harmony Intelligence:

1. Press the HARMONY INTELLIGENCE button (located to the right of the screen) until its indicator is lit.
2. Use the VALUE [+] and [-] to select a Harmony Intelligence.
3. Press the HARMONY INTELLIGENCE button.

Refer to the Owner’s Manual, pp. 28–29 for more information.

---

## Transposing

Use the following procedure to transpose the keyboard:

1. Press the [+] button to raise the key one semitone (located to the left of the disk drive.)
2. Press the [-] button to lower the key one semitone.
3. Press the [+] and [-] buttons simultaneously to return to the key of C.

Refer to the Owner’s Manual, pg. 31 for more information.