
It's a Fact...

The AT-5 is everything you need for more playing enjoyment. The AT-5 includes:

- 26 CD-quality GM2/GS sounds
- 8 drum sets, 1 SFX Set
- 64-note polyphony
- 61-key keyboard
- 8 preset music styles
- 6-track recorder (16 track player) with built-in metronome
- Rotary Sound, Reverb, Sustain, Glide
- Built-in 3.5" floppy disk drive
- LCD screen with SMF lyric display

Intializing—Restoring Factory Settings

Use the following procedure to clear the internal memory and reload the factory settings:

Caution: All USER information will be lost. Be sure to back up any information you wish to keep.

1. Make sure there is no floppy disk in the drive.
2. Turn off the power.
3. While holding down the ONE TOUCH PROGRAM button, turn on the power.
4. Release the ONE TOUCH PROGRAM button when the screen reads: "Factory Reset Executing..."
5. When factory reset is completed, the basic screen reappears.

Refer to the Owner's Manual, pg. 16 for more information.

Selecting Tones

Use the following procedure to select a tone on the upper half and lower half of the keyboard:

1. Press a tone button (e.g. Full/Pipe or Jazz/Theater) under ORGAN in the UPPER section (located to the right of the screen.)
2. Press a tone button (e.g. Strings/Guitar, Piano/Vibes, Trumpet/Trombone, etc.) under ORCHESTRAL in the UPPER section to hear two tones simultaneously.

Note: To hear only the ORCHESTRAL tone, press the selected tone button (indicator lit) under ORGAN in the UPPER section until its indicator is not lit.

3. Press a tone button (e.g. Organ or Piano/Strings) in the LOWER section (located to the left of the screen) to select a tone on the lower half of the keyboard.

Refer to the Owner's Manual, pp. 19–22 for more information.

Selecting Music Styles

Use the following procedure to select a Music Style from internal memory:

1. Press a rhythm button (e.g. Swing/Latin, Country/Gospel, Oldies/Ballad, etc.) in the RHYTHM section (located to the left of the screen.)
2. Use the VALUE [+] and [-] buttons (located to the left of the screen) to select a rhythm.
3. Press the RHYTHM button again.
4. Press the START/STOP button (located to the left of the screen) to play the MUSIC STYLE; press the START/STOP button again to silence the organ.

Refer to the Owner's Manual, pp. 26–28 for more information.

Selecting One Touch Programs

Use the following procedure to select automatic accompaniment settings:

1. Select a Music Style as described under "Selecting Music Styles."
2. Press the ONE TOUCH PROGRAM button in the RHYTHM section (located to the left of the screen.)
3. Play a note or chord on the lower half of the keyboard.
4. Press the START/STOP or INTRO/ENDING button to silence the organ.
5. Press the ONE TOUCH PROGRAM button to return to the previous panel settings.

Refer to the Owner's Manual, pg. 30 for more information.

Playing a Song from Disk

Use the following procedure to play a song from disk:

1. Insert a compatible music disk (i.e. SMF or Atelier format) into the drive.
2. Use the SELECT [+] and [-] buttons in the COMPOSER section (located to the left of the disk drive) to select a song.
3. Press the PLAY/STOP button to play the song.
4. Press the PLAY/STOP button again to silence the organ.

Refer to the Owner's Manual, pp. 40–41 for more information.

Recording a Song

Use the following procedure to Record a Song using automatic accompaniment:

1. Make sure there is no disk in the drive.
2. Press the SELECT [+] button in the COMPOSER section (located to the left of the disk drive) to select "New Song" on the screen.

Note: If "Clear Song Sure?" appears on the screen, press the REC button to clear the song memory.

3. Select a Music Style as described under "Selecting Music Styles."
4. Select an automatic accompaniment as described under "Selecting One Touch Programs."
5. Press the REC button in the COMPOSER section.

Note: The REC button indicator will light and the PLAY/STOP button will blink.

6. Play a note on the lower keyboard to start the automatic accompaniment and play a melody on the upper keyboard.
7. Press the PLAY/STOP button when you are done.
8. Press the RESET button.
9. Press the PLAY/STOP button to play the song.

Refer to the Owner's Manual, pp. 43–45 for more information.

Saving a Recorded Song to Disk

Use the following procedure to save a recorded song to disk:

1. Record a song as described under "Recording a Song."
2. Insert a formatted disk in the drive.

Note: Make sure the disk was formatted on an AT-5 (Refer to the Owner's Manual, pp. 48–49 for more information.)

3. Press the SAVE button in the COMPOSER section (located to the left of the disc drive.)
4. Use the VALUE [+] and [-] buttons to select a format.

Note: Songs saved in ORIGINAL format will only play on Atelier Organs; Songs saved in SMF (Standard MIDI File) format will play on any SMF compatible instrument, regardless of manufacturer.

5. Press the SAVE button.

Refer to the Owner's Manual, pp. 51–52 for more information.

Selecting Harmony Intelligence

Use the following procedure to select Harmony Intelligence:

1. Press the HARMONY INTELLIGENCE button (located to the right of the screen) until its indicator is lit.
2. Use the VALUE [+] and [-] buttons (located to the left of the screen) to select a Harmony Intelligence (e.g. Strings or Traditional.)
3. Press the HARMONY INTELLIGENCE button.

Refer to the Owner's Manual, pg. 32 for more information.