

 **Roland**[®]
C-280
CLASSIC ORGAN

TurboStart

It's a Fact...

The Roland, C-280 Classic Organ, reproduces the beautiful and clear sound of the Classic Organ:

- 61 keys with "click" action, C scale
- MIDI Capability
- Stereo Headphone Jacks
- A-440Hz / baroque pitch (A=415Hz)
- 64 Voice Polyphonic

Adjusting the Volume

Use the following procedure to adjust the volume:

- 1) [Turn] the volume knob, located to the right of the power switch, to adjust the volume.
(Refer to Owner's Manual-page 13, for "Adjusting the Volume".)

Selecting Ensemble-Sounds/Tones

Use the following procedure to select any of the three Sound/Tone:

- 1) [PRESS] a desired Sound/Tone button in the Ensemble section.
(Refer to Owner's Manual-page 17, for "Selecting Ensemble Sounds/Tones".)

Listening to the Demo Songs

Use the following procedure to listen to the Demo Song:

- 1) [PRESS] and [HOLD] the function button, and press the [DEMO] button. (Playback will begin.)
- 2) During playback, you can go to the next variation of the song by pressing the [DEMO] button.
- 3) To [STOP] playback, press the [FUNCTION] button.
(Refer to Owner's Manual-page 23, for "Listening to demo song".)

Adding Reverberation (the Reverb Effect)

Use the following procedure to select Reverb:

- 1) Use the [REVERB] knob to adjust the amount of the reverb effect. (Small Chamber~Large Hall)
(Refer to Owner's Manual-page 22, for "Adding Reverberation".)

Using Baroque pitch

Use the following procedure to use the Baroque pitch:

- 1) Press the [BAROQUE PITCH] button.
(Refer to Owner's Manual-page 19, for "Using the Baroque Pitch".)

Selecting a Temperament

Use the following procedure to select one of the eight Temperaments:

- 1) Press the [TEMPERAMENT] button to select one of the eight Temperaments.
Note: At power-up, the C-280 Classic Organ always reverts to [Equal], the default temperament
(Refer to Owner's Manual-page 20, for "Selecting a Temperament".)

Transposing the keyboard

Use the following procedure to Transpose:

- 1) Hold down the [FUNCTION] button.
- 2) Press the [NOTE] that corresponds to the desired key.
(Refer to Owner's Manual-page 26, for "Transposing the keyboard" information.)

Raising / Lowering the Keyboard by an Octave:

Use the following procedure to raise or lower the keyboard by an Octave:

- 1) Hold down the [FUNCTION] button.
- 2) Press either the [UP] button or [DOWN] button.
(Refer to Owner's Manual-page 25, for "Raising/Lowering the Keyboard by an Octave" information.)

"Turbo-charge" your digital keyboard add a Roland Music Tutor. Each Music Tutor is an interactive learning partner. Available in; Module MT-80s, MT-300/300s and CD-ROM formats.

