
It's a Fact...

The Roland, C-80 Digital Harpsichord, reproduces the beautiful and clear sound of the Flemish harpsichord:

- 61 keys with "click" action, F scale
- MIDI Capability
- Stereo Headphone Jacks
- A-440Hz / baroque pitch (A=415Hz)
- 56 Voice Polyphonic

Adjusting the Volume

Use the following procedure to adjust the volume:

- 1) [Turn] the volume knob, located to the right of the power switch, to adjust the volume.
(Refer to Owner's Manual-page 16, for "Adjusting the volume".)

Selecting a Sound/Tone

Use the following procedure to select any of the eight Sound/Tone:

- 1) [PRESS] a desired Sound/Tone
(Refer to Owner's Manual-page 16, for "Selecting Sounds/Tone".)

Listening to the Demonstration Songs

Use the following procedure to listen to one of the three Demo Songs:

- 1) [PRESS] and [HOLD] the function button, and press the [DEMO] button. (Playback will begin.)
- 2) During playback, you can advance to the next song by pressing the [DEMO] button.
- 3) To [STOP] playback, press the [DEMO] button.
(Refer to Owner's Manual-page 22, for "Listening to demo songs and song list".)

Adding Reverberation

Use the following procedure to select Reverb:

- 1) Use the [REVERB] knob to adjust the amount of the reverb effect.
(Refer to Owner's Manual-page 20, for "Adding Reverberation".)

Using Baroque Pitch

Use the following procedure to use the Baroque pitch:

- 1) Press the [BAROQUE PITCH] button.
(Refer to Owner's Manual-page 18, for "Using the Baroque Pitch".)

Selecting a Temperament

Use the following procedure to select one of the eight Temperaments:

- 1) Press the [TEMPERAMENT] button to select one of the eight Temperaments.
Note: At power-up, the C-80 Digital Harpsichord always reverts to [Equal], the default temperament
(Refer to Owner's Manual-page 18, for "Selecting a Temperament".)

Transposing the keyboard

Use the following procedure to Transpose:

- 1) Hold down the [FUNCTION] button.
- 2) Press the [NOTE] that corresponds to the desired key.
(Refer to Owner's Manual-page 25, for "Transposing the keyboard" information.)

Raising / Lowering the Keyboard by an Octave:

Use the following procedure to raise or lower the keyboard by an Octave:

- 1) Hold down the [FUNCTION] button.
- 2) Press either the [UP] button or [DOWN] button.
(Refer to Owner's Manual-page 24, for "Raising/Lowering the Keyboard by an Octave" information.)