

Welcome

Congratulations on your purchase of the Roland CD-2e. This TurboStart contains step-by-step instructions that will quickly introduce you to the CD-2e's major features.

Playing the Demo

- 1 Press SD CARD (MODE).
- 2 Press the REW or FF button to select SD 01.
- 3 Press the PLAY button.
- 4 Turn the VOLUME knob to adjust the output level.
- 5 Press STOP to end playback.

Formating the Secure Digital (SD) card

The CD-2E supports SDHC Class II cards up to 8 GB in size, and standard SD cards that are 2 GB and less. Use the following steps to format a card:

- 1 Press the SD CARD button.
- 2 Press MENU.
- 3 Press the function +/- button to select SD CARD.
- 4 Press function ◀ or ▶ to select Format?
- 5 Press ENTER twice.

Recording Directly to a CD Using the Internal Microphones

The CD-2e features built-in mics that make it quick and easy to record.

- 1 Press the EASY GUIDE button.
- 2 Press ◀ or ▶ to select 1.Recording, and then press ENTER.
- 3 Press + or - to select CD-R/RW, and the press ENTER.
- 4 Press + or - to select Easy INT MIC.
- 5 Press ENTER, and then press EXIT.
- 6 Turn the MIC knob to set your recording level.
- 7 Press the RECORD-MARKER button.
- 8 Press PLAY.
- 9 Press STOP when you're finished recording.

Note: When you're recording with the internal or an external microphone, the onboard speakers are disabled to prevent feed back. To listen during recording, use headphones.

Applying Reverb

To apply reverb to your recordings in the CD-2e, press REVERB—each press selects Off, Light, Medium, or Deep.

Changing the Key of a Song on a CD

You can change the key of a song from a CD. Use these steps to try out this cool feature:

- 1 Press the CD button.
- 2 Insert a playable CD.
- 3 Press MENU.
- 4 Press ◀ / ▶ to select Playback Key.
- 5 Press ENTER.
- 6 Press + or - to change the key.
- 7 Press PLAY.
- 8 Press STOP when you're finished.

Using the Karaoke Feature (Center Cancel)

Here's how to remove the vocals from a CD. (The success of this depends on the CD.)

- 1 Insert a commercial CD that contains vocals.
- 2 Press EASY GUIDE repeatedly until "6. Karaoke" appears in the display.
- 3 Press ENTER.
- 4 Press + or - to select the desired CD track, and then press ENTER.
- 5 Press + to turn Center Cancel to On, and then press ENTER.
- 6 Connect an external microphone, and then confirm that the MIC SELECT switch on the CD-2e's side panel is set to "EXT."
- 7 Press ENTER.
- 8 Turn the MIC knob to adjust the microphone level, and then press ENTER.
- 9 Press PLAY to begin recording—you can sing along with the music.
- 10 Press STOP when you're finished.