

Welcome

Congratulations on your purchase of the Roland CD-2 CD/CF Recorder. This TurboStart contains step-by-step instructions to quickly introduce you to the CD-2's major features.

CD Recording from the Built-In Mics

- 1 Press EJECT.
- 2 Place a blank CD-R in the CD tray, and then press EJECT to close the tray.
- 3 Press MIC SELECT repeatedly until it turns green.
- 4 Press MENU, and then turn the DATA wheel until you see "[MIC] Int MIC Auto Lvl" on the display.
- 5 Press ENTER.
- 6 Turn the DATA wheel to set Int MIC Auto Lvl to On.
- 7 Press EXIT twice.
- 8 In the COMPACT DISC area, press the MARKER (Record) button so it flashes red.
- 9 When you're ready to record, press PLAY/PAUSE.
- 10 Press STOP when you're finished recording.
- 11 To listen back to your recording, press PLAY.

Applying Effects

You can apply a variety of effects to your guitar, instrument, or vocal performance as follows:

- 1 Press the EFFECT button repeatedly to select the desired effects category.

Note: If "Use EFFECT? MST will be Off" appears, press ENTER.

- 2 Turn the DATA wheel to select the desired effect patch.
- 3 Press EXIT to return to the main display.

To Format a Compact Flash Card

- 1 In the CompactFlash area, press EDIT repeatedly until you see "CF EDIT" on the display.
- 2 Press ENTER three times.

CompactFlash Recording from the Built-In Mics

- 1 Press MIC SELECT repeatedly until it turns green.
- 2 Press MENU, and then turn the DATA wheel until you see "[MIC] Int MIC Auto Lvl" on the display.
- 3 Press ENTER.
- 4 Turn the DATA wheel to set "Int MIC Auto Lvl" to On.
- 5 Press EXIT twice.
- 6 In the CompactFlash area, press the MARKER (Record) button so it flashes red.
- 7 When you're ready to record, press PLAY/PAUSE.
- 8 Press STOP when you're finished recording.
- 9 To listen back to your recording, press PLAY.

Recording from CompactFlash to CD with a Mastering Effect

- 1 Press PLAY/PAUSE in the CompactFlash area.
- 2 Press the PREVIOUS TRACK or NEXT TRACK buttons to select the recording you want to hear.
- 3 Press MASTERING.
- 4 Turn the DATA wheel to select the desired mastering effect preset.
- 5 If your track is still playing, press STOP.
- 6 Press TRACK SELECT—if a blank CD is not in the tray, the tray will open.
- 7 Insert a blank CD and close the tray.
- 8 Turn the DATA wheel to select the song on the flash card you want to record onto a CD.
- 9 Press TRACK SELECT.

Note: To select additional songs, repeat Step 8 and 9.

- 10 Press WRITE.
- 11 Press ENTER.
- 12 When "Finalize:Yes" appears in the display, press ENTER.
- 13 When "Are You Sure?" is displayed, press ENTER.
- 14 When the CD is recorded, the disc is ejected—"Write Completed. Another disc?" appears in the display.
- 15 Press EXIT to complete the CD-recording process.