


KR-105 Quick Stats

- 630 GM2/GS tones
- 15 drum sets, 1 SFX set
- 64-note polyphony
- 88-key Progressive Hammer Action keyboard
- DigiScore music display
- Visual Music Assistant
- 230 preset music styles
- 350 Music Assistant registrations
- 36 user programs
- Twin Piano mode
- 16-track recorder
- Reverb, Chorus, Rotary, 32 other effects
- Built-in 3.5" floppy disk drive
- LCD touch screen with SMF lyric display

Selecting Tones


Use the following procedure to select a tone:

1. Press a tone button (e.g. Piano, Organ, Guitar/Bass, etc.) in the TONE section (located to the right of the LCD screen.)
2. Use the  buttons on the screen, or the scrolling wheel to the right of the screen to locate a tone.
3. Touch a tone name on the screen to use that sound.

Refer to the Owner's Manual, pg. 21 for more information. See pgs. 3-5 of this Turbo Start for a complete Tone List.

Selecting Music Styles

Use the following procedure to select a Music Style from internal memory:

1. Press a music style button (e.g. Pop/Rock, Ballad/Acoustic, Oldies/Country etc.) in the MUSIC STYLE section (located to the left of the screen.)
2. Use the  buttons on the LCD screen or the scrolling wheel to the right of the screen to locate a music style.
3. Touch a music style on the screen.
4. Press the START/STOP button (located to the left of the screen) to play the music style; press the START/STOP button to silence the piano.

Refer to the Owner's Manual, pg. 35 for more information. See pg. 6 of this Turbo Start for a complete list of the KR-105's Music Styles.

Selecting One Touch Programs


Use the following procedure to select automatic accompaniment settings:

1. Select a Music Style as described under "Selecting Music Styles."
2. Press the ONE TOUCH ARRANGER button (located to the right of the screen below the tone buttons.)
3. Play a note on the lower half of the keyboard to begin the accompaniment.
4. Press the START/STOP button (located to the left of the screen) to silence the piano.

Refer to the Owner's Manual, pg. 36 for more information.

Selecting Music Assistants

Use the following procedure to select a Music Assistant:

1. Press the MUSIC ASSISTANT button (located to the left of the screen.)
2. Use the  buttons on the screen or the scrolling wheel to the right of the screen to locate a Music Assistant title.
3. Touch a song title on the screen.
4. Play a note on the lower half of the keyboard to begin the song.
5. Press the START/STOP button (located to the left of the screen) to stop the piano.

Refer to the Owner's Manual Quick Start, pg. 12 for more information.

Selecting Visual Music Assistant

Use the following procedure to utilize the Visual Arranger:

1. Select a Music Assistant registration as described under "Selecting Music Assistants."
2. Press the button labeled "VISUAL" on the LCD screen with your finger.
3. Use the buttons labeled "Intro," "Verse," etc. to custom-arrange the song visually.

Refer to the Owner's Manual Quick Start, pg. 12 for more information.

Using DigiScore


Use the following procedure to access and utilize the DigiScore feature:

1. Press the SONG/FILE button (located to the left of the LCD screen) to select a song. The score of this song will be displayed.
2. After selecting the song, press the DIGISCORE button (located to the left of the LCD screen).
3. If the selected song is one that has been recorded, the user can see his or her own performance. If the song is an internal song, the user can see the notes and play along with the song.

Refer to the Owner's Manual pg. 61 for more information.




Selecting User Programs

Use the following procedure to access the User Programs:

1. Press the USER PROGRAM button (located to the right of the MIC ECHO knob)
2. Use the  buttons on the LCD screen or the scrolling wheel to the right of the screen to select a User Program.

Playing a Song from Disk

Use the following procedure to play a song from disk:

1. Insert a floppy disk into the drive.
2. Press the SONG/FILE button (located to the left of the screen.)
3. Touch the  or  button to scroll through the music categories (i.e. Favorites, Jazzy, etc) to get to the DISK category.
4. Use the  buttons on the LCD screen or the scrolling wheel to the right of the screen to locate a song.
5. Touch a song on the screen.
6. Press the PLAY/STOP button (located to the left of the disk drive) to play the song, and also to stop it.

Refer to the Owner's Manual, pg. 54 for more information. See pg. 7 of this Turbo Start for a complete list of the KR-105's internal songs.

Recording a Song

Use the following procedure to Record a Song using automatic accompaniment:

1. Press the REC button (located to the left of the disk drive.)

 



Note: The REC button indicator will light and the PLAY button will blink. If "Do you want to record a new song..." appears on the screen, touch NEW SONG and then touch OK on the screen.

2. Play a song.
3. Press the PLAY/STOP button when you are done.
4. Press the RESET button.
5. Press the PLAY button to play the song.

Refer to the Owner's Manual, pg. 76 for more information, including how to multi-track record and record using accompaniment.

Saving a Recorded Song to Disk

Use the following procedure to save a recorded song to disk:



 
1. Record a song as described under "Recording a Song."
2. Insert a formatted disk into the drive.
3. Press the SONG/FILE button (located to the left of the LCD screen)
4. Touch FILE on the screen.
5. Touch SAVE on the screen.
6. Press the button labeled "DISK" and, using the  and  buttons, select a numerical destination on the disk.
7. Touch the  button to name the song.
8. Touch the  button on the screen.

Refer to the Owner's Manual, pg. 87 for more information.

Intializing—Restoring Factory Settings

Use the following procedure to clear the internal memory and reload the factory settings:

Caution: All USER information will be lost. Be sure to back up any information you wish to keep.

1. Press the ONE TOUCH PIANO button (located to the right of the screen.)
2. Touch the  button on the screen.
3. Use the  button on the screen to scroll to the FACTORY RESET button.
4. Touch FACTORY RESET on the screen.
5. Touch the  button on the screen.
6. Touch OK on the screen.
7. When "Turn on the power again" appears on the screen, turn the power off and then on to complete the factory reset.

Refer to the Owner's Manual, pg. 138 for more information.

Tone List

Piano

- 1 Grand Piano1
- 2 PianoStrings
- 3 Piano Choir
- 4 Pro Stage
- 5 Harpsichord
- 6 Vintage EP
- 7 Vibraphone
- 8 Harpsi.Doubl
- 9 Marimba
- 10 Steel Drums
- 11 Honky-tonk 2
- 12 Stage E.Piano
- 13 Ballad Piano
- 14 Tremolo EP
- 15 Jazzy Vib+Gt
- 16 Wurly
- 17 Rock Piano
- 18 Clav.
- 19 Honky-Tonk
- 20 Bright Piano
- 21 Harpsi.Singl
- 22 UprightPiano
- 23 Grand Piano2
- 24 Bell Piano
- 25 Piano Oohs
- 26 E. Grand
- 27 MIDI Piano1
- 28 E.Piano 1
- 29 FM+SA EP
- 30 St.FM EP
- 31 Hard FM EP
- 32 Soft Marimba
- 33 MIDI EP1
- 34 MIDI EP 2
- 35 Hard EP
- 36 Harpsi.o
- 37 Coupled Hps.
- 38 Vibra Bells
- 39 Celesta
- 40 Glockenspiel
- 41 Soft E.Piano
- 42 60's E.Piano
- 43 E.Piano 2
- 44 E.Piano 3
- 45 Xylophone
- 46 Music Box
- 47 Balafon
- 48 Detuned EP 1

- 49 Detuned EP 2
- 50 Hard E.Piano
- 51 Hard Clav.
- 52 Soft Clav.
- 53 Reso Clav.
- 54 Phase Clav.
- 55 Pop Vibe.
- 56 Pop Celesta
- 57 Tubular-bell
- 58 Santur
- 59 Kalimba
- 60 Air Grand
- 61 Piano 1
- 62 Piano 2
- 63 Piano 3

Organ

- 1 Jazz Organ
- 2 Full Organ 1
- 3 Lower Organ
- 4 Theater Org.
- 5 Nason flt 8'
- 6 Bandneon
- 7 Organ Flute
- 8 Jazz Organ2
- 9 Full Organ 2
- 10 Full Organ 3
- 11 Lower Organ2
- 12 Church Organ
- 13 Rock Organ1
- 14 Harmonica
- 15 Pop Organ
- 16 Accordion
- 17 Trem.Flute
- 18 Jazz Organ3
- 19 Jazz Organ4
- 20 Full Organ 4
- 21 Rotary Org.S
- 22 Rotary Org.F
- 23 Rock Organ2
- 24 Pipe Org. Bs
- 25 Organ Bass
- 26 Metalic Org.
- 27 VS Organ
- 28 Organ 1
- 29 Organ 2
- 30 Digi Church

Guitar / Bass

- 1 Steel Guitar

- 2 Nylon Guitar
- 3 Jazz Guitar
- 4 Nylon+Steel
- 5 12str Guitar
- 6 Nylon Gt.o
- 7 Hawaiian Gt.
- 8 Banjo
- 9 JC E.Guitar
- 10 Muted Gt.
- 11 Acoustic Bs.
- 12 A.Bass+Cymb1
- 13 DistortionGt
- 14 Steel Vox
- 15 Rock Rhythm
- 16 Rock Rhythm2
- 17 Overdrive Gt
- 18 Power Guitar
- 19 Power Gt.2
- 20 Muted Dis.Gt
- 21 Fingered Bs.
- 22 Picked Bs.
- 23 Fretless Bs.
- 24 Slap Bass
- 25 Muted Gt.2
- 26 Mellow Gt.
- 27 5th Dist.
- 28 Feedback Gt2
- 29 Synth Bass 1
- 30 Synth Bass 2
- 31 SynthBass101
- 32 Jungle Bass
- 33 Modular Bass
- 34 WireStr Bass
- 35 ResoSH Bass
- 36 SH101 Bass
- 37 Mute PickBs.
- 38 Mr.Smooth
- 39 Open Hard
- 40 Dazed Guitar
- 41 Acid Guitar
- 42 Ukulele
- 43 Koto
- 44 Shamisen

Strings

- 1 Strings
- 2 Slow Strings
- 3 Choir Str
- 4 Harp Strings

- 5 Trem. Str
- 6 Violin
- 7 Cello
- 8 Warm Strings
- 9 DecayStrings
- 10 Orchestra
- 11 Oct Strings
- 12 St. Harp
- 13 Velo Strings
- 14 Legato Str
- 15 PizzicatoStr
- 16 SlowStrings2
- 17 Bell Strings
- 18 OrchestraHit
- 19 Warm JP Str
- 20 Slow Violin
- 21 Contrabass
- 22 Timpani
- 23 Syn.Strings1
- 24 Syn.Strings2
- 25 Strings 2
- 26 OB Strings
- 27 Euro Hit
- 28 6th Hit
- 29 Bass Hit

Sax / Brass

- 1 EX Tenor Sax
- 2 Soprano Sax
- 3 Flute
- 4 Trumpet
- 5 MutedTrumpet
- 6 AltoSax + Tp
- 7 Oboe
- 8 Clarinet
- 9 TromboneSoft
- 10 Soft Brass
- 11 Baritone Sax
- 12 Tuba
- 13 Romantic Tp
- 14 Power Brass
- 15 St. Brass ff
- 16 English Horn
- 17 BrassSection
- 18 Blow Sax
- 19 Brite Brass
- 20 Brass ff
- 21 EX Trumpet
- 22 Grow Sax

- 23 Alto Sax
- 24 Tenor Sax
- 25 GS Bari Sax
- 26 Flugel Horn
- 27 Fr.Horn Solo
- 28 Synth Brass3
- 29 Trombone2
- 30 Piccolo
- 31 Pan Flute
- 32 GS Pan Flute
- 33 Blow Pipe
- 34 Bottle Blow
- 35 Bassoon
- 36 Recorder
- 37 French Horn
- 38 Synth Brass1
- 39 Synth Brass2
- 40 Oct SynBrass
- 41 Shakuhachi
- 42 Brass 1
- 43 Brass 2
- 44 Ocarina

Voice / SFX

- 1 Jazz Scat
- 2 Dreamy Choir
- 3 Boys Choir
- 4 Holy Voices
- 5 HollowReleas
- 6 Rich Choir
- 7 Dat Accent
- 8 Bop Accent
- 9 Thum Voice
- 10 Pop Voice
- 11 Org Bells
- 12 Humming
- 13 Doos Voice
- 14 Choir Oohs
- 15 Choir Aahs
- 16 Warm SqrPad
- 17 New Age Pad
- 18 LM PureLead
- 19 LM Square
- 20 Natural Lead
- 21 2600 SubOsc
- 22 SquareWave2
- 23 Fantasia
- 24 Crystal
- 25 Harpvox

Tone List Continued

26	CC Solo	77	GS Harpsi	128	Gt.Feedback	179	GS Bari Sax	229	Kalimba
27	Brightness	78	Coupled Hps.	129	GS Ac.Bass	180	GS Oboe	230	Bagpipe
28	Syn.Square	79	Harpsi.w	130	GS Fing.Bass	181	English Horn	231	Fiddle
29	JP8 Square	80	Harpsi.o	131	Picked Bs	182	Bassoon	232	Shanai
30	FM Lead	81	Soft Clav.	132	Fretless Bs.	183	Clarinet	233	Tinkle Bell
31	FM Lead 2	82	Celesta	133	Slap Bass	184	Piccolo	234	Agogo
32	Mg Lead	83	Glockenspiel	134	Slap Bass 2	185	GS Flute	235	Steel Drums
33	Dual Sqr&Saw	84	Music Box	135	SynthBass101	186	Recorder	236	Woodblock
34	P5 Saw Lead	85	Vibraphone	136	Synth Bass 1	187	GS Pan Flute	237	Castanets
35	Rhythmic Saw	86	Vibe.w	137	Synth Bass 2	188	Bottle Blow	238	Taiko
36	Waspy Synth	87	GS Marimba	138	Synth Bass 3	189	Shakuhachi	239	Concert BD
37	JP8 Pulse	88	Marimba	139	Synth Bass 4	190	Whistle	240	Melo. Tom 1
38	Cheese Saw	89	Xylophone	140	Rubber Bass	191	Ocarina	241	Melo. Tom 2
39	SynVox	90	Tubular-bell	141	Violin	192	Square Wave	242	Synth Drum
40	Clear Bells	91	Church Bell	142	Slow Violin	193	Square	243	808 Tom
41	Soft Crystal	92	Carillon	143	Viola	194	Sine Wave	244	Elec Perc.
42	Digi Bells	93	Santur	144	Cello	195	Saw Wave	245	Reverse Cym.
43	Nylon Harp	94	Organ 1	145	Contrabass	196	Saw	246	Gt.FretNoise
44	Nylon+EP	95	Organ 2	146	Trem. Str	197	Doctor Solo	247	Gt.Cut Noise
45	Fantasia 2	96	Pop Organ	147	PizzicatoStr	198	Syn.Calliope	248	String Slap
46	Soft Pad	97	Detuned Or.1	148	GS Harp	199	Chiffer Lead	249	Breath Noise
47	P5 Poly	98	Detuned Or.2	149	Timpani	200	Charang	250	Fl.Key Click
48	Reso Saw	99	Church Org.1	150	GS Strings	201	Solo Vox	251	Seashore
49	RAVE Vox	100	Church Org.2	151	Orchestra	202	5th Saw Wave	252	Rain
50	Fat & Perky	101	Church Org.3	152	GS Sl.Str	203	Bass & Lead	253	Thunder
51	Heaven II	102	Full Organ 4	153	Syn.Strings1	204	Fantasia	254	Wind
52	JP8 Sqr Pad	103	Jazz Organ	154	Syn.Strings2	205	Warm Pad	255	Stream
53	Sweep Pad 2	104	Rock Organ 2	155	Syn.Strings3	206	Polysynth	256	Bubble
54	Big Panner	105	Reed Organ	156	Choir Aahs	207	Space Voice	257	Bird
55	Ai-yai-a	106	Accordion Fr	157	Choir	208	Bowed Glass	258	Dog
56	Echo Pan 2	107	Accordion It	158	Pop Voice	209	Metal Pad	259	Horse-Gallop
57	Falling Down	108	GS Harmonica	159	SynVox	210	Halo Pad	260	Bird 2
58	Poly King	109	Bandoneon	160	OrchestraHit	211	Sweep Pad	261	Telephone 1
59	Warm Pad	110	GS Nylon Gt.	161	GS Trumpet	212	Ice Rain	262	Telephone 2
60	RandomEnding	111	Nylon Guitar	162	Trombone	213	Soundtrack	263	DoorCreaking
61	Piano 1	112	Nylon Gt.o	163	Trombone 2	214	Crystal	264	Door
62	Piano 1w	113	Ukulele	164	Tuba	215	Syn Mallet	265	Scratch
63	Piano 1d	114	Steel-str.Gt	165	MutedTrumpet	216	Atmosphere	266	Windchime
64	Piano 2	115	12-str.Gt	166	French Horn	217	Brightness	267	Helicopter
65	Piano 2w	116	Mandolin	167	Fr.Horn 2	218	Goblin	268	Car-Engine
66	Piano 3	117	Jazz Guitar	168	Brass 1	219	Echo Drops	269	Car-Stop
67	Piano 3w	118	Hawaiian	169	Brass 2	220	Echo Bell	270	Car-Pass
68	GS Honkytonk	119	Clean Gt.	170	Synth Brass1	221	Echo Pan	271	Car-Crash
69	Honky-tonk 2	120	Chorus Gt.	171	Synth Brass2	222	Star Theme	272	Siren
70	GS E.Piano1	121	Muted Gt.	172	Synth Brass3	223	Sitar	273	Train
71	GS E.Piano2	122	Funk Gt.	173	Synth Brass4	224	Sitar 2	274	Jetplane
72	60's E.Piano	123	Funk Gt.2	174	AnalogBrass1	225	Banjo	275	Starship
73	E.Piano 1v	124	Overdrive Gt	175	AnalogBrass2	226	Shamisen	276	Burst Noise
74	E.Piano 2v	125	DistortionGt	176	GS Sop.Sax	227	Koto	277	Applause
75	Detuned EP 1	126	Feedback Gt.	177	Alto Sax	228	Taisho Koto	278	Laughing
76	Detuned EP 2	127	Gt.Harmonics	178	Tenor Sax			279	Screaming

Tone List Continued

280 Punch	309 AccordionFr	338 Strings	367 Bottle Blow	396 Star Theme
281 Heart Beat	310 Harmonica	339 SlowStrings	368 Shakuhachi	397 Sitar
282 Footsteps	311 Bandoneon	340 Syn.Str 1	369 Whistle	398 Banjo
283 Gun Shot	312 Nylon-strGt	341 Syn.Str 2	370 Ocarina	399 Shamisen
284 Machine Gun	313 Steel-strGt	342 Choir Aahs	371 Square Wave	400 Koto
285 Lasergun	314 Jazz Guitar	343 Pop Voice	372 Saw Wave	401 Kalimba
286 Explosion	315 Clean Gt.	344 SynVox	373 Doctor Solo	402 Bagpipe
287 Piano 1	316 Muted Gt.	345 Orche.Hit	374 SynCalliope	403 Fiddle
288 Piano 2	317 Funk Gt.	346 Trumpet	375 ChifferLead	404 Shanai
289 Piano 3	318 OverdriveGt	347 Trombone	376 Charang	405 Tinkle Bell
290 Honky-tonk	319 Dist.Guitar	348 Tuba	377 Solo Vox	406 Appendices
291 E.Piano 1	320 Gt.Harmo	349 M.Trumpet	378 5th SawWave	407 Agogo
292 E.Piano 2	321 Acoustic Bs	350 FrenchHorns	379 Bass & Lead	408 Steel Drums
293 Harpsichord	322 Fingered Bs	351 Brass 1	380 Fantasia	409 Woodblock
294 Clav.	323 Picked Bs.	352 SynthBrass1	381 Warm Pad	410 Taiko
295 Celesta	324 Fretless Bs	353 SynthBrass2	382 Polysynth	411 Melo.Tom 1
296 Glocken	325 Slap Bass 1	354 A.Brass 1	383 Space Voice	412 Synth Drum
297 Music Box	326 Slap Bass 2	355 Soprano Sax	384 Bowed Glass	413 ReverseCym.
298 Vibraphone	327 SynthBass 1	356 Alto Sax	385 Metal Pad	414 Fret Noise
299 Marimba	328 SynthBass 2	357 Tenor Sax	386 Halo Pad	415 BreathNoise
300 Xylophone	329 Rubber Bass	358 BaritoneSax	387 Sweep Pad	416 Seashore
301 Tubularbell	330 Violin	359 Oboe	388 Ice Rain	417 Bird
302 Santur	331 Viola	360 EnglishHorn	389 Soundtrack	418 Telephone 1
303 Organ 1	332 Cello	361 Bassoon	390 Crystal	419 Helicopter
304 Organ 2	333 Contrabass	362 Clarinet	391 Syn Mallet	420 Applause
305 Pop Organ 1	334 Tremolo Str	363 Piccolo	392 Atmosphere	421 Gun Shot
306 Rock Organ2	335 Pizzicato	364 Flute	393 Brightness	
307 ChurchOrg.1	336 Harp	365 Recorder	394 Goblin	
308 Reed Organ	337 Timpani	366 Pan Flute	395 Echo Drops	

Music Style List

Pop/Rock

- 1 Pop
- 2 '80s
- 3 Funky Disco
- 4 AdultContemp
- 5 Uptown Rock
- 6 EZ Listening
- 7 Strumin'Away
- 8 '70s Disco 1
- 9 SmoothContmp
- 10 Simple Rock
- 11 '60s Feelin
- 12 16Beat Pop
- 13 Light Pop
- 14 Bright Pop
- 15 Heart Beat
- 16 Easy Pop
- 17 '80s Pop 2
- 18 '80s Pop 3
- 19 Cute Pop
- 20 LovelyShuffl
- 21 Barry Dance
- 22 '70s Disco 2
- 23 '70s Dance
- 24 Fever Dance
- 25 KeepOnDance
- 26 Big House
- 27 '90s House
- 28 House Pop
- 29 Hip Hop
- 30 HipHop Beat
- 31 Hip'n Hop
- 32 Easy Hop
- 33 MorningShffl
- 34 Groovy Pop
- 35 Smile Pop
- 36 Sunny Pop
- 37 Feel Good
- 38 US Groove
- 39 Night Pop
- 40 '90s Pop
- 41 Soul Pop
- 42 Cool Pop
- 43 Guitar Pop
- 44 Busy Pop
- 45 Vibey Pop
- 46 Steady Rock
- 47 Rock

48 Shuffle Rock

49 Big Rock

50 Power Rock

51 Heavy Rock

52 Elec Rock

Ballad/Acoustic

1 ModernBallad

2 '80s Ballad

3 AcoustBallad

4 AcoustEzLstn

5 UnpluggedPop

6 UnplugBallad

7 6/8 Ballad

8 6/8 Pop

9 Acoustic pop

10 Live Pop

11 Adult Pop 1

12 Adult Pop 2

13 6/8 Ballad

14 Love Beat

15 CoolLiveBand

16 Night Ballad

17 GuitarShuffl

18 Euro Ballad

19 Guitar Trio

20 Midnight Bld

21 Pop Ballad

22 Piano Pop

23 Love Songs

24 Scat Ballad

25 Fireside

26 Piano Ballad

27 Story Ballad

28 SimpleBallad

29 ClassicBalad

30 Happy Ballad

31 PoppinBallad

32 Soul Ballad

33 AIClapBallad

34 LayBakBallad

35 UKLiteBallad

36 UpTempBallad

37 Ballad

38 US Ballad

39 R.8-Beat 1

40 R.8-Beat 2

41 R.16-Beat 1

42 R.16-Beat 2

43 R.16-Beat 3

44 R.16-Beat 4

45 R.Afro&Swing

46 R.5BeatSwing

47 R.Shuffle

48 R.Waltz

49 R.March

50 R.5-Beat

51 R.7-Beat

52 R.Swing

53 Piano Swing

Oldies/Country

1 Detroit Pop

2 '60s Rock'n

3 DreamSloRock

4 CountryRock1

5 CntryBallad1

6 Groovin R&B

7 Oldies 1

8 Clock Rock'n

9 Happy Country

10 SwinginCntry

11 Soul

12 50s Dance

13 Oldies 2

14 CntryBallad2

15 CountrySwing

16 Rock'n Fever

17 Country Beat

18 Slow Country

19 Rockin'

20 Country Fox

21 Blues

22 R&B

23 Slow Dance

24 Twist

25 '60s Beach

26 Slow Oldies

27 Early Rock

28 Go Go Rock

29 Mersey Beat

30 Oldie

31 Cool 6/8

32 Cajun

33 Country

34 Cntry Dreams

35 CountryPop 2

36 Easy Country

37 CntryBallad3

38 Charleston

BigBand/Swing

1 MidnitSloSwg

2 BigBand Slow

3 BigBand Med

4 BigBand Fast

5 Medium Swing

6 Quick Step

7 StringsSwing

8 Swing Fox

9 Fox Band

10 Gipsy Swing

11 Fast Swing

12 JzGuitrSwing

13 Jazz Waltz

14 Blue Boogie

15 BigBandBalad

16 '30s BigBand

17 Big Band

18 Jazz Ballad

19 LooseBigBand

20 Smooth Jazz

21 Jazz Club

22 Boogie

23 Organ Swing

24 Shuffle

25 Hawaiian

Latin/Gospel

1 Latin Pop

2 Orch Bossa

3 GospelShuffl

4 ContPraise 1

5 ContPraise 2

6 Gospel

7 Samba

8 ModernChaCha

9 Salsa

10 Soft Gospel

11 Gospel Shout

12 AcoustRhumba

13 Acoust Samba

14 Trad Rhumba

15 Gospel Pop

16 GospelBallad

17 Latin Dance

18 Cha Cha

19 Trad Tango

20 SunshineBosa

21 Jazz Bossa

22 Merengue

23 GuitarRhumba

24 Mambo

25 Fast Samba

26 Fast Bossa

27 Big Samba

28 Disco Samba

29 Mid Bossa

30 Reggae

31 Beguine

32 Oye Son

Trad/World

1 Musical

2 Polka Pop

3 Vienna Waltz

4 Kids

5 Movie March

6 German Pop

7 Orch Bolero

8 Orch Waltz

9 Holiday 1

10 Classic

11 Bachata

12 MarchingBand

13 March

14 Slow Waltz

15 EnglishWaltz

16 Paris

17 Quiet Waltz

18 Holiday 2

19 Holiday 3

20 Folk Beat

21 Lager Polka

22 Polka

23 PartySchlagr

24 Schlagr

25 Irish

26 Tejano

27 Musette

28 Ireland

29 Paso Doble 1

30 Paso Doble 2

Internal Song List

Masterpieces

- 1 Sonate No.15
- 2 Liebestraume 3
- 3 Etude, op.10-3
- 4 Je te veux
- 5 Valse, op.64-1
- 6 Golliwog's Cakewalk
- 7 Fantaisie Impromptu
- 8 Arabesque 1
- 9 Blauen Donau
- 10 Auf Flugeln des Gesanges
- 11 Mazurka No.5
- 12 Gymnopedie 1
- 13 Etude, op.25-1
- 14 Clair de Lune
- 15 Etude, op.10-5
- 16 Dr. Gradus Ad Parnassum
- 17 Grande Valse Brillante
- 18 La priere d'une Vierge
- 19 Course en Troika
- 20 To The Spring
- 21 Valse, op.64-2
- 22 Radetzky Marsch
- 23 Traumerei
- 24 Moments Musicaux 3
- 25 Prelude, op.28-15
- 26 Harmonious Blacksmith
- 27 Ungarische Tanze 5
- 28 Turkischer Marsch(Beethoven)
- 29 Nocturne No.2
- 30 Fruhlingslied
- 31 Praludium
- 32 Jagerlied
- 33 Menuet Antique
- 34 Fur Elise
- 35 Turkischer Marsch(Mozart)
- 36 Standchen
- 37 Humoreske
- 38 Blumenlied
- 39 Alpenglockchen
- 40 Menuett G dur(Beethoven)
- 41 Venezianisches Gondellied
- 42 Alpenabendrote
- 43 Farewell to the Piano
- 44 Brautchor
- 45 Battle of Waterloo
- 46 Wiener Marsch

- 47 Le Coucou
- 48 Menuett G dur(Bach)
- 49 Spinnerlied
- 50 Gavotte
- 51 Heidenroslein
- 52 Zigeuner Tanz
- 53 La Cinquantaine
- 54 Csikos Post
- 55 Dolly's Dreaming Awakening
- 56 La Violette
- 57 Frohlicher Landmann
- 58 Sonatine op.36-1(Clementi)
- 59 Sonatine op.20-1(Kuhlau)
- 60 Sonatine No.5(Beethoven)

Practice

- 1 Beyer 15
- 2 Beyer 21
- 3 Beyer 25
- 4 Beyer 29
- 5 Beyer 34
- 6 Beyer 38
- 7 Beyer 42
- 8 Beyer 46
- 9 Beyer 51
- 10 Beyer 55
- 11 Beyer 60
- 12 Beyer 64
- 13 Beyer 67
- 14 Beyer 73
- 15 Beyer 78
- 16 Beyer 81
- 17 Beyer 90
- 18 Beyer 93
- 19 Beyer 98
- 20 Beyer 103
- 21 Czerny 100- 1
- 22 Czerny 100-10
- 23 Czerny 100-20
- 24 Czerny 100-30
- 25 Czerny 100-38
- 26 Czerny 100-43
- 27 Czerny 100-60
- 28 Czerny 100-75
- 29 Czerny 100-86
- 30 Czerny 100-96
- 31 Openness
- 32 Arabesque
- 33 Pastoral
- 34 A Small Gathering
- 35 Innocence

- 36 Progress
- 37 The Clear Stream
- 38 Gracefulness
- 39 The Hunt
- 40 Tender Flower
- 41 The Young Shepherdess
- 42 Farewell
- 43 Consolation
- 44 Austrian Dance
- 45 Ballad
- 46 Sighing
- 47 The Chatterbox
- 48 Restlessness
- 49 Ave Maria
- 50 Tarantella
- 51 Angelic Harmony
- 52 Gondola Song
- 53 The Return
- 54 The Swallow
- 55 The Knight Errant
- 56 Invention 1
- 57 Invention 2
- 58 Invention 3
- 59 Invention 4
- 60 Invention 5
- 61 Invention 6
- 62 Invention 7
- 63 Invention 8
- 64 Invention 9
- 65 Invention 10
- 66 Invention 11
- 67 Invention 12
- 68 Invention 13
- 69 Invention 14
- 70 Invention 15

Folks

- 1 Annie Laurie
- 2 Londonderry Air
- 3 Amazing Grace
- 4 Ave Maria
- 5 Entertainer
- 6 Greensleeves
- 7 Hallelujah!
- 8 Little Brown Jug
- 9 Marchin' In
- 10 Stagecoach

Kids

- 1 Old MacDonald Had A Farm

- 2 Twinkle Twinkle, Little Star
- 3 Mary Had A Little Lamb
- 4 London Bridge
- 5 Jingle Bells
- 6 Silent Night, Holy Night
- 7 Joy To The World
- 8 Grandfather's Clock
- 9 Puppy's March
- 10 Frog Song
- 11 Little Fox
- 12 Lightly Row
- 13 The Cuckoo

Jazzy

- 1 Preludelight
- 2 Blue Sky Rag
- 3 Secret Agent
- 4 Late Night Chopin
- 5 Fly Free
- 6 Sun Daze
- 7 Keepers Tale
- 8 Count On The Blues
- 9 One Down And Easy
- 10 A Prelude To ...
- 11 Bach's A Boppin'
- 12 Kismet's Salsa
- 13 From Matthew's Passion
- 14 Roll Over Ludwig

Easy Classical

- 1 Canon (Pachelbel)
- 2 Ombra maifu
- 3 O'sole Mio
- 4 Les patineurs, Valse
- 5 Brindisi
- 6 Die Lorelei
- 7 Traumerei
- 8 Liebestraume 3
- 9 Prelude, op.28-15
- 10 Grande Valse Brillante
- 11 Mondschein
- 12 Fantaisie Impromptu
- 13 Valse, op.64-1
- 14 Air sul G
- 15 Gymnopedie 1
- 16 Ungarische Tanze 5
- 17 Turkischer Marsch(Mozart)
- 18 Nocturne No.2