

Welcome

Congratulations on your purchase of the EDIROL R-09 WAVE/MP3 Recorder. This TurboStart contains step-by-step instructions that will quickly introduce you to the R-09's major features.

Recording

The R-09 offers high-quality recording capabilities in a compact package. Here's how to record in the R-09 using its built-in microphone:

- 1 Turn on the power.
- 2 Press the ● button—the red ● light flashes, indicating Record-Standby mode.
- 3 Press the + or - INPUT level buttons located on the left side panel of the R-09 to adjust the level so the meter in the display averages between 12 and 6.
- 4 Press ● to start recording.
- 5 Press ■ when you're finished.

Listening to a Recording

Here's how to listen to a recording on the R-09:

- 1 Connect headphones to the headphones OPTICAL jack on the right side panel.
- 2 Press ■ or ▶/|| to begin playback.
- 3 Press the + or - VOLUME buttons on the side panel to adjust the playback volume.

Tip: To move backward or forward through the recording, press and hold the ◀◀ or ▶▶ button, respectively.

- 4 When you're finished, press ■.

Selecting a File for Playback

There are two different ways to select a file for playback. Here's how:

To select a file from the main screen:

- 1 Press ◀◀ or ▶▶ to select different files. As you press the buttons, the files are selected and shown in the top of the display.

To select files while from the Finder screen:

- 1 Press and release the FINDER/MENU button.
- 2 Press ■ or ▶/|| to choose the desired file.
- 3 Once you've selected the file, press ● twice to load it—the file's now ready for playback.

Selecting the Recording Format

The R-09 has several different recording formats to choose from. For example, files recorded at 48kHz/WAV-24bit mode would have better sound quality than files recorded at 44.1k/MP3 192kbps; however, they use up more memory. Here's how to change the record format to the one that best suits your needs.

- 1 Press and hold FINDER/MENU until "SELECT" is flashing in the upper right corner of the display.
- 2 Press ■ or ▶/|| to select Recorder Setup.
- 3 Press ●.
- 4 Press ◀◀ or ▶▶ to choose the Sample Rate (44.1kHz or 48kHz).
- 5 Press ■ to select Rec Mode.
- 6 Press ◀◀ or ▶▶ to change the recording mode.

Note: For more details and descriptions of the different modes, refer to Pages 26-28 in the R-09 manual.

- 7 Press FINDER/MENU twice to return to the main screen.

Recording an External Audio Device (CD's, cassettes, etc.)

Almost any external audio device can be recorded to the R-09. Here's how:

- 1 Connect the output of the external audio device—CD player, Cassette player, mp3 player, etc.—to the LINE IN jack on the top panel of the R-09.
- 2 Adjust the volume on your external device and begin its playback.
- 3 Follow Steps 1-5 of the "Recording" section above.

Naming a File

To name an R-09 recording you've made:

- 1 Press and release FINDER/MENU—"Finder" appears at the top of the R-09 display.
- 2 Press **■** or **▶/||** to choose the recording you'd like to rename.
- 3 Press **●**.
- 4 Press **■** or **▶/||** to select **Rename**.
- 5 Press **●**.
- 6 Press **■** or **▶/||** to choose a character location.
- 7 Press **■** or **▶/||** to choose the desired character.
- 8 Repeat Steps 6-7 until the new name is entered.
- 9 Press **●** to store the recording's new name.
- 10 Press FINDER/MENU to return to the main screen.

Deleting Files

- 1 Press and release FINDER/MENU—Finder appears on the R-09 display.
- 2 Press **■** or **▶/||** to select the song you wish to delete.
- 3 Press the **●** button.
- 4 Press **■** or **▶/||** to select **Delete**.
- 5 Press **●**—"Delete, Push [REC]" appears in the display.
- 6 Press **●** to delete the song.
- 7 Press FINDER/MENU to return to the main screen.

Exporting Files to a Computer

Here's how to transfer R-09 files to a computer.

- 1 Turn on your computer and the R-09.
- 2 Connect one end of the included R-09 USB cable to your computer's USB port, and the other end to the R-09.

Note: The USB port on the R-09 is located under the bottom-panel lid. See the instructions on Page 10 in the R-09 Owner's Manual to learn how to access the port.

- 3 After making your connections, the R-09 appears as a device in the My Computer window on the PC, or on the Mac OS X desktop.

Note: The computer can't recognize the R-09 if the connection is made while the R-09's Menu screen is showing or during playback or recording of an R-09 file. Press FINDER/MENU to return to the R-09's Finder screen, or press **■** to halt playback.

For Windows:

- 1 Click Start in the taskbar, and then click "My Computer."
- 2 Double-click "Removable Disk."
- 3 Select the desired R-09 files and drag them to the desktop or some other location.
- 4 When you're done, right click "Removable Disk" in the My Computer window, and then click "Eject." This safely disconnects the R-09 from your computer.

For Mac OS X:

- 1 "No Name" or "Untitled" appears on your desktop once the R-09 is connected via USB.
- 2 Double-click the "No Name" or "Untitled" icon.
- 3 Select the desired R-09 files and drag them to the desktop or some other location.
- 4 When you're done, click and hold the "No Name" or "Untitled" icon and drag it into the trash. This safely disconnects the R-09 from the computer.

Formatting an SD card

A new SD memory card must be formatted before using it in the R-09.

Warning: Formatting the SD card completely erases all files and information on the card. Make sure to back up any information you wish to preserve before formatting the card.

- 1 Confirm that the SD card is inserted completely into the R-09.
- 2 Press and hold FINDER/MENU until "SELECT" flashes in the upper right corner of the display.
- 3 Press **■** or **▶/||** to select **SD Card**.
- 4 Press **●**.
- 5 Press **■** or **▶/||** to select **Format**, and then press **●**.
- 6 Press **▶|** to select **Yes**, and then press **●**.
- 7 Press FINDER/MENU to return to the main screen.