

- **Renowned 88-note Piano Sample from the Fantom-X**
 - **Compact Progressive Hammer Action**
 - **Lightweight and Portable**
 - **Simple Navigation**
 - **USB MIDI Interface**

Renowned 88-note Piano Sample from the Fantom-X

- **128-voice polyphony with 88-note individually sampled grand piano waveforms.**
- **340 additional sounds and 85 rhythms – from jazz to techno.**
- **78-multi-effect types, plus independent effects such as reverb, 2-band digital EQ and Sound Control.**

Compact Progressive Hammer Action

- **Features Roland's Compact Progressive Hammer-Action keyboard.**
- **Simulates real grand piano by providing a heavier touch in lower octaves that gets increasingly lighter in the upper range.**

Lightweight and Portable

- **Impressive, heavy-duty body is one of the lightest 88-note pianos in its class!**
- **At less than 35 pounds is ultra easy to transport.**
- **Built tough enough for the rigors of the road or classroom.**

Simple Navigation

- **Dedicated buttons and knobs are provided for instant access to dual/split keyboard setups, tones, EQ and effects.**
- **Handy Setup mode you can quickly store and 84 performance setups.**
- **No searching through menus to find the most common functions.**

USB MIDI Interface

- **Connect to PC or Macs via the USB port for one-cable MIDI communication.**
- **Standard MIDI In/Out port connectors are provided for master, slave or solo operation.**
- **Can be played as a standalone instrument, driven from other MIDI gear or used as a master controller for an entire MIDI setup.**

Play the Demo Songs

Start by playing the four demo songs in the RD-300SX:

- 1) Hold down EDIT and press WRITE. The demo screen appears.**
- 1) Press the INC or DEC button to select the song you want to hear.**
- 1) Press ENTER to start playback.**
- 1) To stop a song while it is playing, press ONE TOUCH [PIANO].**

Show the Variety and Quality of Sounds

Use “One Touch” to quickly show some of the 340 sounds:

- 1) Press ONE TOUCH [PIANO].**
- 2) Press any of the large TONE SELECT category buttons.**
- 3) Press [INC]/[DEC] to select different tones within a category.**

Show the Easy Access to Great Sounding Tones and Rhythms

Demonstrate the 84 Setups, which include Tones, FX and Rhythms:

- 1) Press the SETUP button so it is lit.**
- 2) Press INC or DEC, or the TONE SELECT button to select a Setup.**
- 3) From the Setup list, choose “S.12 RHY:Jazz Trio1”.**
- 4) Press the RHYTHM button to start playback of the Rhythm part.**
- 5) Play the entire keyboard to hear all the elements of the Setup.**
- 6) To stop the pattern from playing, press RHYTHM until it is not lit.**
- 7) Repeat Steps 1-6 to check out these Setups: S.21 RHY:Jazz Trio2, S.34 RHY:R&B Groove, S.42 RHY:Bigband, S.73 RHY:Piano/EP.**

Show the Roland Progressive Hammer-Action

Demonstrate Roland’s superior Hammer Action:

- 1) Turn down the volume and examine the feel of the key bed.**
- 2) Show the progressive weight of the keys by comparing the lowest keys (heavier) to the highest keys (lighter).**
- 3) Compare the action of RD-300SX to other keyboards in your store.**